


BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE

9220 Knockdown Guide



1. Detach left and right side sections (parts A and B, respectively) by removing the screws at the specified location.

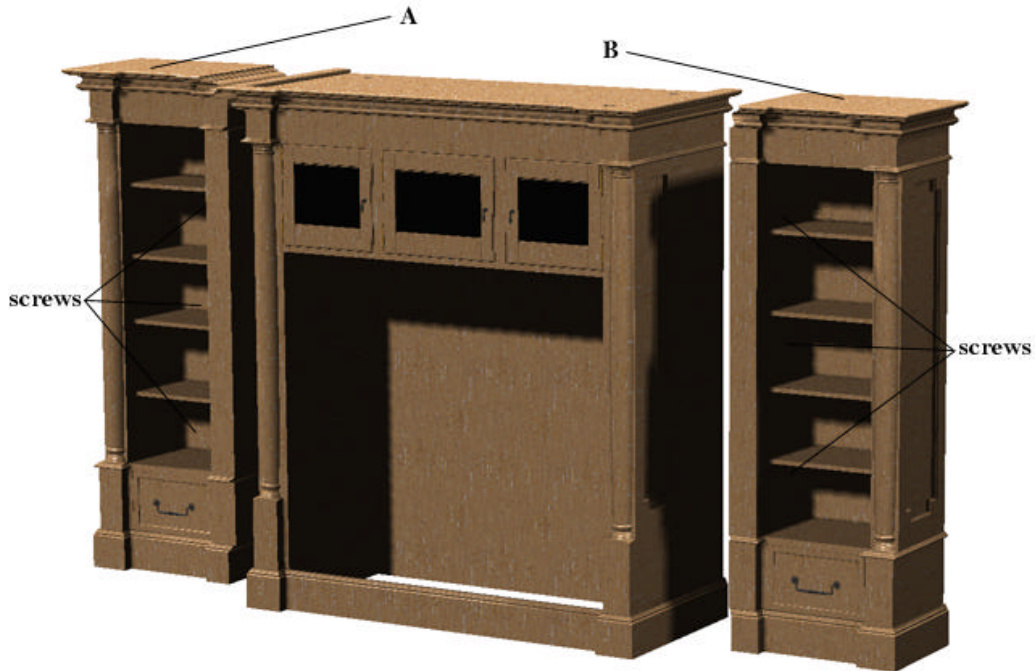

2. Open the doors (part C) and remove the screws that join the doors with the hinges. Locate and remove all screws at the backside of the armoire. Detach the back panel (part D) with care.



3. Remove the screws at the specified locations and slide the interior dividers (Part E) through the back of the armoire. Using an Allen key, turn the universal connectors counter-clockwise to release the side panels (parts F & G) and the remaining parts (parts H & I)

