

BAUSMAN & COMPANY, INC.


FINE BENCH MADE FURNITURE

Credenza Knock Down Guide

Align both pedestals and set apart at 34". Remove drawers and open doors; attach the tabletop to the pedestals using the screws provided. Please note that the screws are drilled from the underside so that they do not show on the tabletop.



Attach the front and back apron to the pedestals as shown below.

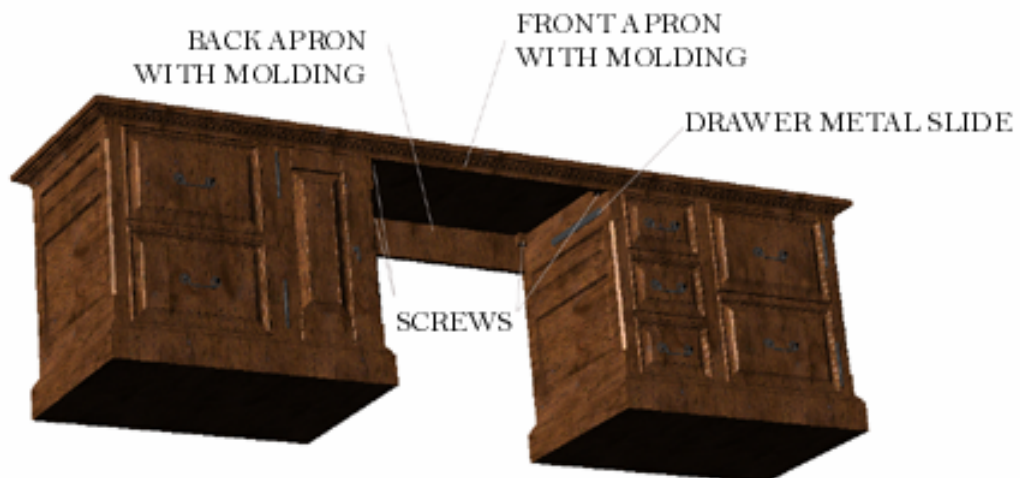

BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE

Lastly, insert the keyboard drop-down assembly into the drawer metals slides provided.

DRAWER METAL SLIDES

