


BAUSMAN & COMPANY, INC.


FINE BENCH MADE FURNITURE

Credenza with Hutch Top Knock Down Guide

Align both pedestals and set the tabletop on the pedestals. Slide the tabletop on the left pedestal so that the dowels on the tabletop fit inside the dowel cutouts on the left pedestal. Slide the right pedestal towards the center of the tabletop so that dowels on the tabletop fit inside the dowel cutouts on the right pedestal. Open the doors and attach the tabletop to the pedestals using the screws provided.

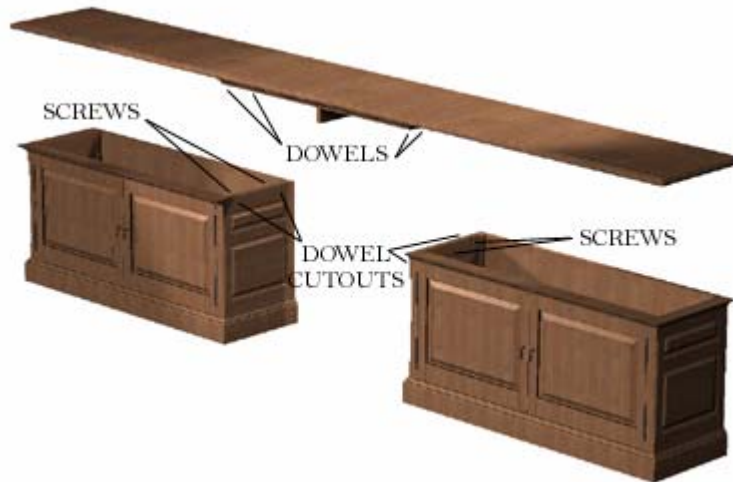


Screw the tabletop and the pedestals together at the locations shown below. Please note that the screws are drilled from the underside so that they do not show on the exterior surface.

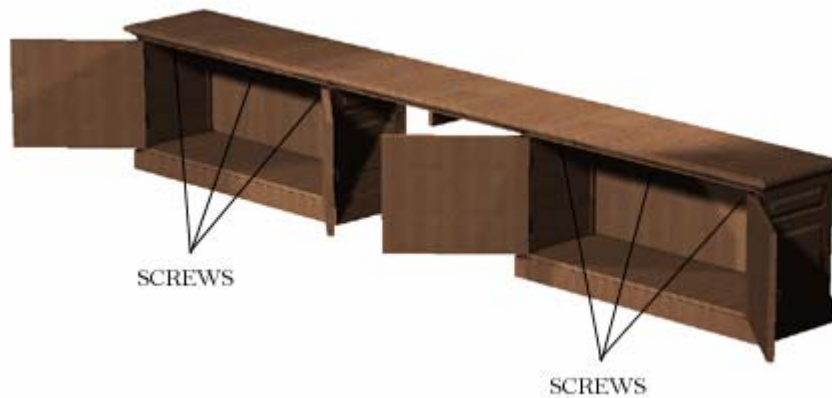


BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE

Set one of the hutches on top of the left credenza so that the dowels on the hutch top fit inside the dowel cutouts on the tabletop. Attach the hutch top and the tabletop together using the screws provided. Note that the screws are drilled from the underside and one hutch top has dowel cutouts and the other hutch top has dowels. Select the hutch top with the dowel cutouts in the crown molding. Cutouts should be facing the center of the tabletop.

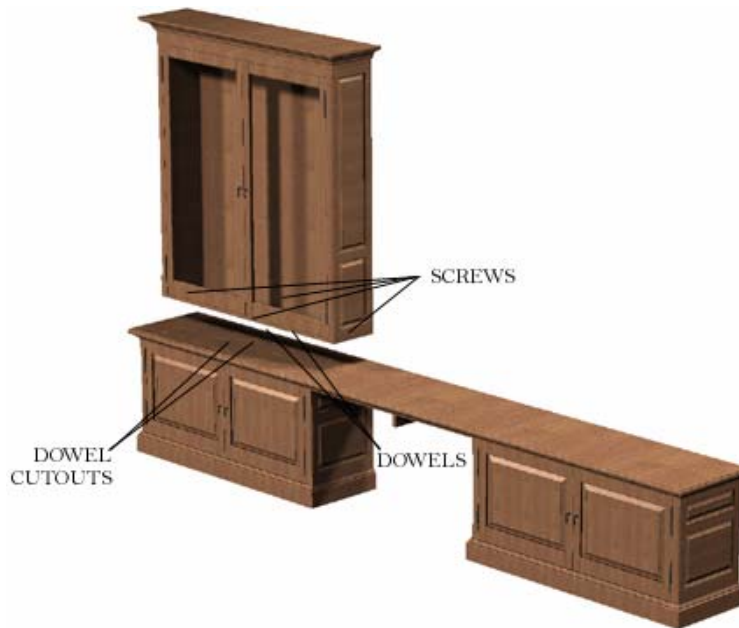


Slide the center crown towards the left hutch top so that the dowels on the crown fit inside the cutouts on the hutch top. Attach the two together using the universal connectors provided.

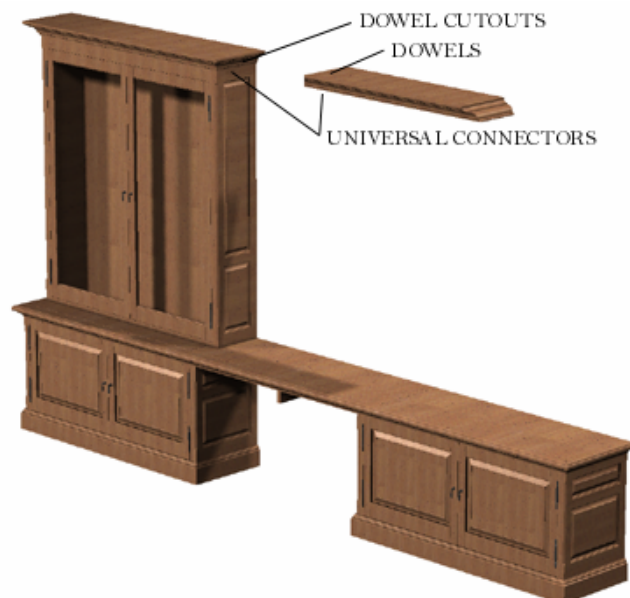

BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE

Set and slide the remaining hutch top on top of the right credenza so that the dowels on the hutch top fit inside the dowel cutouts on the center crown. Attach the crown and hutch top together using the universal connectors provided. Screw the tabletop and hutch top at the locations shown below. Note that the screws are drilled from the underside.

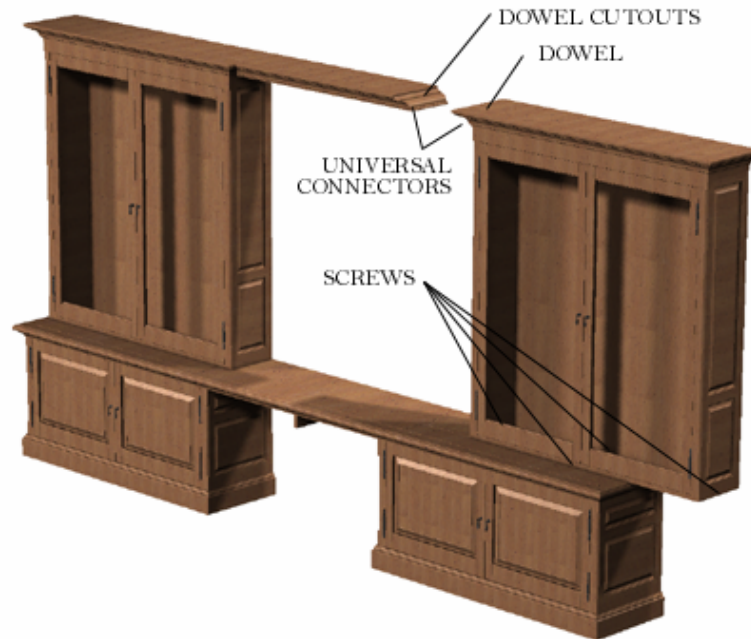

Lastly, insert the keyboard drop-down assembly into the drawer metal slides provided.

