

BAUSMAN & COMPANY, INC.

FINE BENCHMARKED FURNITURE


Z-Cleat Instruction

Tall and shallow armoires or cabinets are prone to tipping over due to their high center of gravity and relatively small base area. Z cleats are provided along such armoires to prevent accidents in an event of an earthquake, while operating the cabinet or any event that will cause the armoire to tip over. Below is an instruction on how to install a Z-Cleat.

- 1) The Z-Cleat comes in pair, one to be mounted to the cabinet while the other one is to be mounted to the wall.



- 2) Below is a diagram on where to mount the Z-Cleat using the screws provided.

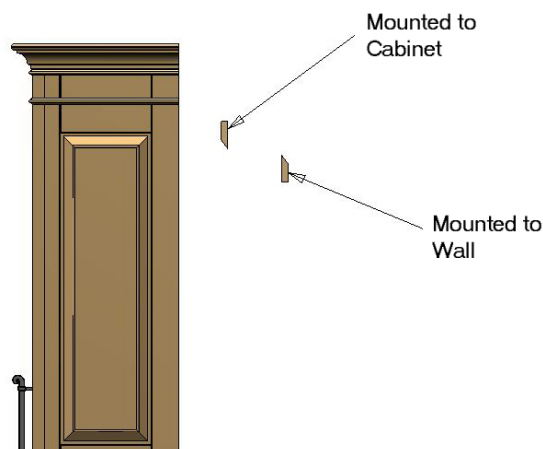

- 3) Make sure that the configuration of the Z-cleat positioned correctly. When mounted correctly, the final configuration should look like as shown on the picture.

